
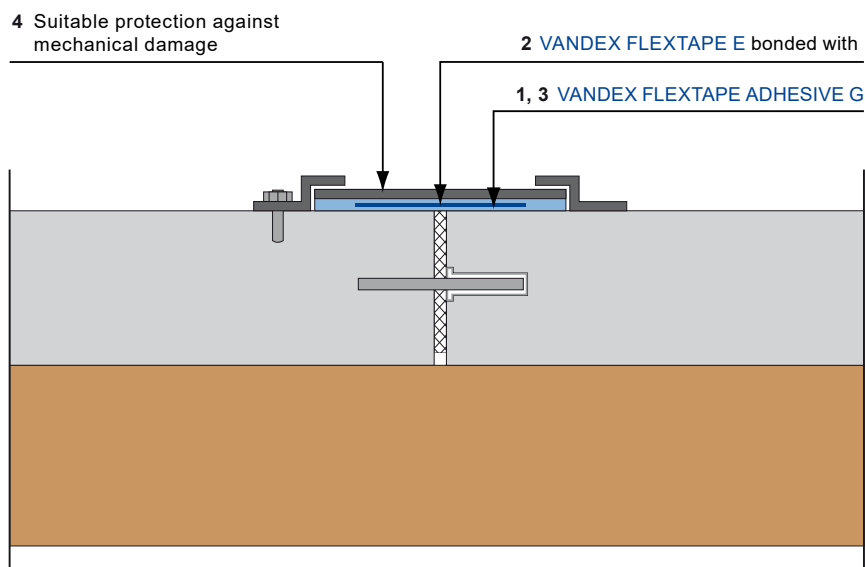


EXPANSION JOINTS SUBJECTED TO NEGATIVE WATER PRESSURE

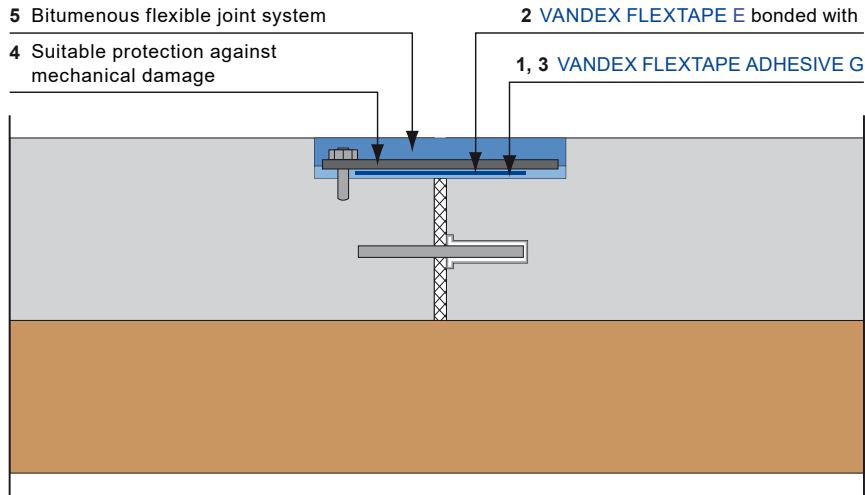

Application Instructions

- 1 Apply first coat of VANDEX FLEXTAPE ADHESIVE G to the dry and prepared concrete substrate.
- 2 Place the VANDEX FLEXTAPE E into the still wet adhesive.
- 3 Apply second coat of VANDEX FLEXTAPE ADHESIVE G.
- 4 Where required provide appropriate mechanical protection for the VANDEX FLEXTAPE E system.
- 5 **Optional:** Apply appropriate flexible cavity filler system.

Remark:

- Substrate adhesion strength > 1.5 N/mm²

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

Other products approved for use in potable water facilities:

VANDEX FLEXTAPE bonded with VANDEX FLEXTAPE ADHESIVE TW

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.